


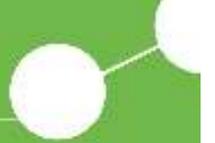

AIR SEPARATION UNITS (ASU)

APPLICATION NOTE



Application

Hydrogen detection in the Argon side of an air separation unit (ASU) within a cold box

Background

The process of air separation involves the intake of huge volumes of air from the atmosphere. Throughout the process the air is separated into its elemental components in the form of liquid oxygen, argon and nitrogen.

There are two sides to a cold box, the ASU side and the argon production side; as argon is manufactured commercially by means of air separation technology. Hydrogen is used in the process of argon production to maximize the quantities produced.

In the cryogenic process, atmospheric air is compressed and cooled. Following liquefaction, the air is fractionally distilled based on the different boiling points of each component.

During distillation, liquid nitrogen is the first product extracted from the high-pressure column. Next, a stream containing oxygen and argon (plus other gases) is withdrawn. The crude stream, containing approximately 10 percent argon, is refined in a separate distillation column to produce pure argon.



Figure 1: Ground View of Air Separation (ASU) & Argon side of Cold box

Reference Users

Air Liquide

Manufacturers refine the stream by adding a controlled quantity of hydrogen to mix with the argon, catalytically burning the trace oxygen to water, drying and finally distilling the stream to remove remaining hydrogen and nitrogen. After reaction of oxygen and hydrogen, the hot argon is cooled and the water vapor resulting from the H₂ – O₂ reaction is removed, usually in a dual bed adsorber drier system. The deoxo system can be complex and involves the cost of supplying hydrogen. This process enables the production of 99.9995% pure argon.

Advantages

It is important to monitor the hydrogen to ensure efficiency of the system and for safety, as hydrogen is subject to leak out of the piping and collect within the cold box. The *HY-OPTIMA™ Model 740* can be readily used for this application since it enables in-line, continual hydrogen measurement in the intern argon backgrounds. Traditional combustible sensors cannot be used since they require the presence of oxygen for operation.



H2scan offers sampling systems within a weatherproof enclosure for this application. The sample is extracted from key points within the cold box to a central location where the hydrogen content is continuously analyzed by the analyzer.

Customers with air separation plants include Air Liquide, Praxair, Air Products, Linde Gas and any other gas producers.

Model HY-OPTIMA™ 740

HYDROGEN SPECIFIC SENSING SYSTEMS



HYDROGEN IS THE FUTURE, WE CAN SENSE IT!